Core Alignment Fusion splicer 905+ kit






Active Fusion Control Technology



1. Active Fusion control by cleave condition

One of main causes of high splice loss is bad cleave end face. The 90S+ analyzes the condition of both L and R cleave end faces and performs optimal fusion control. This new technology improves splice loss significantly and reduces the risk of re-installation.

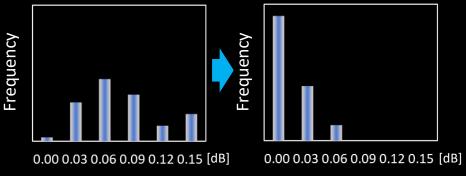


Splice loss with large cleave angle : $3 < \theta < 5$ degree



*G.652 splicing result measured with a cut-back method. The splicing result changes depending on the fiber type and fiber characteristics.


2. Active Fusion control by fiber brightness

Fusion is easily affected by changes in the environment. The 90S+ uses real-time fusion parameter control by analyzing the fiber's brightness intensity during fusion. It contributes to stable, reduced splice loss.

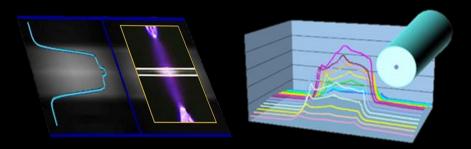

3. Active Fusion control by fiber discrimination

Adequate splice parameters may differ depending on fiber type. The 90S+ automatically applies the optimum splice parameters depending on the fiber type.

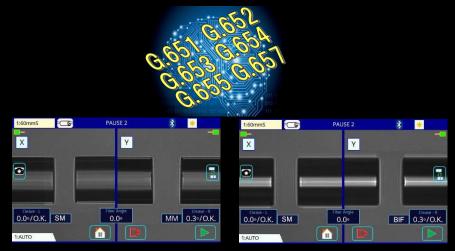

Left:G.652-Right:G.651


Left:G.652-Right:G.657

Active Blade Management Technology



1. Active Blade rotation by motor

The 90S+ and CT50 fiber cleaver are enabled with wireless data connectivity. This capability allows automatic cleaver blade rotation when the 90S+ judges the blade is worn. The 90S+ can connect to two CT50s simultaneously.

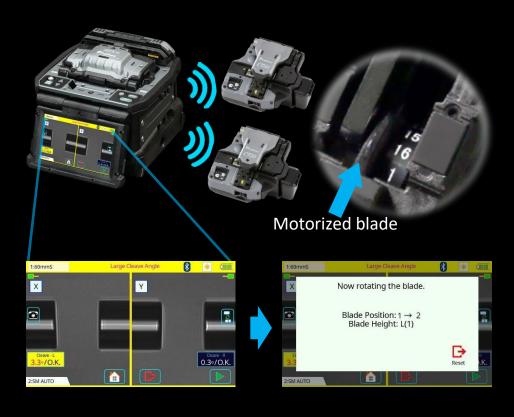

2. Active Blade life management

The 90S+ displays the remaining blade life and informs the user when a blade height change, position change, or new blade is required.



Enhanced Splice Quality

The below graphs show the number of cleaves on the horizontal line with frequency of large cleave angle, bad cleave shape and no cleave at all. When the frequency of large cleave angle increases, **Active Blade** Management Technology can detect this increasing ratio point and rotate the blade position automatically. **Active Blade** Management Technology significantly reduces frequency of large cleave angles occurring but even when it does occur **Active Fusion** Control Technology can reduce high splice loss by precise fusion control.

The 90S+ can minimize the occurrence of high splice loss and contribute to reduce the risk of re-Installation by using these 2 key technologies together.




Example of cleave failure frequency

Operation Time Reduction

1. Automatic Open-Close Wind protectors


The faster automated features of the 90S+ reduce installation times. With this splicer, an operator can complete the entire splice process from splicing to heating without touching the 90S+ and only moving the fiber.

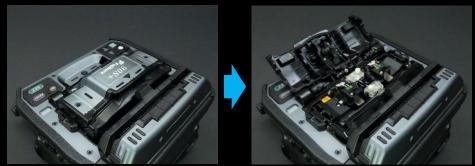

Automatic Open-Close wind protectors

2. Operation time reduction

The shape of the sheath clamp is optimized for 60mm length protection sleeves. The length from splice point to the edge of the sheath clamp is 30mm. Therefore, it is easy to center the protection sleeve over the splice by using your fingers to reference the splice point.

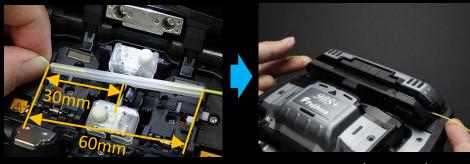


Easy centering

Automatic heater clamp

3. Fiber retention clamp

The fiber retention clamps support the automated operations. When the sheath clamps open automatically after splicing, the fiber retention clamps gently hold the spliced fiber to keep it from flying out. The retention clamps release when the fiber is lifted by the operator.

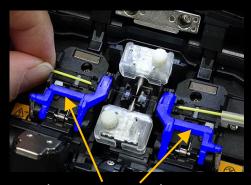

Fiber retention clamps

4. Operation time reduction

These functions enable the 90S+ to reduce operation time by 50% over the previous model.




User Friendly

1. Carrying Case

There are multiple ways to utilize the 90S carrying case. The 90S+ is ready to use just by opening the case, but it is also possible to use the 90S+ on top of the carrying case or only with the work tray depending on the work environment.

2. Work Tray


The newly designed work tray has many functions. There are two drawers for storage which are large enough to store tools or battery packs. Also, the work tray can be divided in two, so it is configurable to fit your work space.

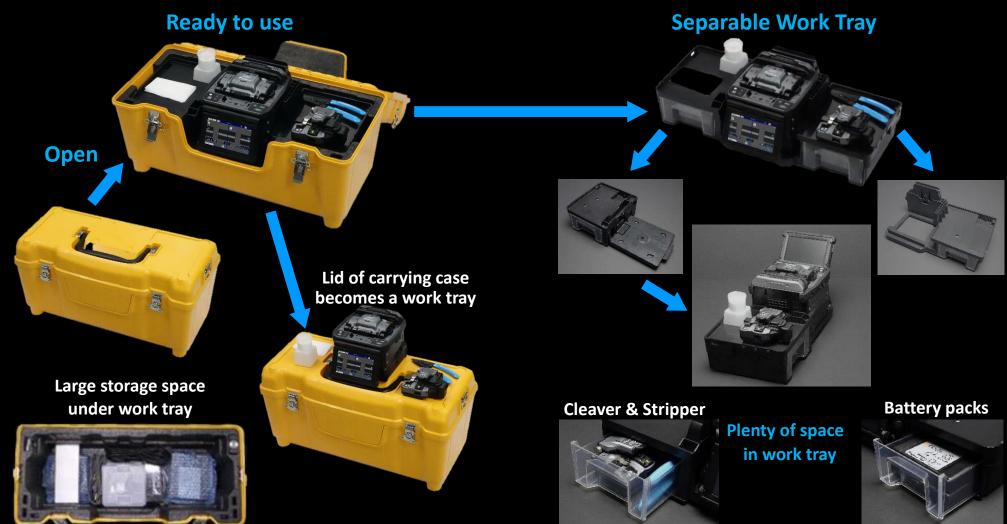


User Friendly

3. Loose tube Compatibility


The sheath clamp of the 90S+ is compatible with loose tube fiber. The Protrusion part on of the sheath clamp for loose tube fiber engages or retracts by simply changing the switch position with your finger.

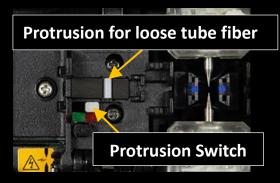

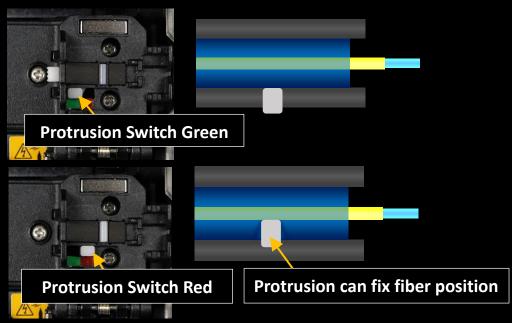


4. Tool-less Electrodes and illumination

The 90S+ electrodes come as an "assy" including the fixing screw. You can rotate the screw by hand without tools, enabling easy electrode replacement.

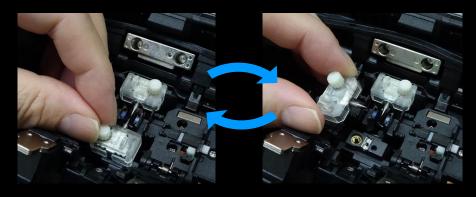

The transparent electrode covers support wider illumination of the v-groove. As the sheath clamp opens on the opposite side of the illumination lamp, the sheath clamp area is illuminated without shadow.



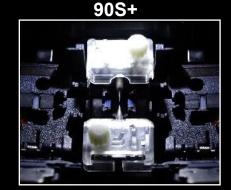

Wider Illumination range

Standard Package


90S+ Standard Package











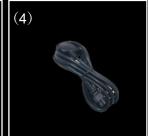

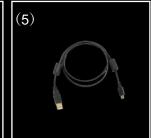




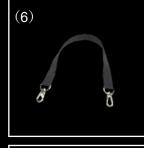

(13)



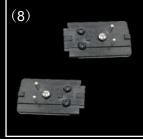






Description	Model No.	Qty
(1) Core Alignment Fusion Splicer	90S+	1pc
(2) Battery Pack*	BTR-15	1pc
(3) AC Adapter	ADC-20	1pc
(4) AC Power Cord	ACC-14, 15, 16 17or 18	1pc
(5) USB Cable	USB-01	1pc
(6) Fusion Splicer Strap	ST-02	1pc
(7) Electrodes (spare)	ELCT2-16B	1pair
(8) Fiber Holder Set Plate	SP-03	1pair
(9) Carrying Case	CC-39	1pc
(10) Work Tray Left	WT-09L	1pc
(11) Work Tray Right	WT-09R	1pc
(12) Work Tray J-Plate	JP-09	1pc
(13) Tripod Screw	TS-03	2pcs
(14) Carrying Case Strap	ST-03	1pc
(15) Alcohol Dispenser	AP-02	1pc
(16) Quick Reference Guide	QRG-02-E	1pc
(17) Single Fiber Stripper	SS03 or SS01	1pc
(18) Optical Fiber Cleaver	CT50	1pc
(19) Fiber Scrap Collector	FDB-05	1pc
(20) Fiber Setting Plate	AD-10-M24	1pc
(21) Case, for cleaver	CC-37	1pc
(22) Hexagonal Wrench	HEX-01	1pc
* Please follow IATA regulation when shipping the battery by air.		






(19)



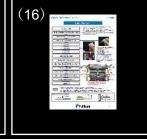


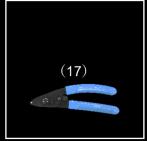







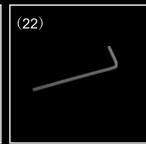

Specifications



90S+ Specifications

Item		Specification	
Fiber alignment method		Active core alignment	
Fiber count can be spliced		Single fiber	
	Fiber tree	Single mode optical fiber	
Applicable fiber	Fiber type	Multi mode optical fiber	
libei	Cladding dia.	80 to 150µm	
Applicable	Sheath clamp	Coating dia. : Max. 3000µm	
coating	Officatif clarify	Cleave length: 5 to 16mm *1	
		ITU-T G.652 : Avg. 0.02dB	
		ITU-T G.651 : Avg. 0.01dB	
F1 11	Splice loss *2	ITU-T G.653 : Avg. 0.04dB	
Fiber splice		ITU-T G.654 : Avg. 0.04dB	
performance		ITU-T G.655 : Avg. 0.04dB ITU-T G.657 : Avg. 0.02dB	
		SM FAST mode : Avg. 7 to 9sec.	
	Splice time *3	AUTO mode : Avg. 14 to 16sec.	
Applicable	Sleeve type	Heat shrinkable sleeve	
protection	Sleeve length	Max. 66mm	
sleeve	Sleeve dia.	Max. 6.0mm before shrinking	
Sleeve heat		60mm slim mode : Avg. 9 to 10sec.	
performance	Heat time *4	60mm mode: Avg. 13 to 15sec.	
Fiber tensile test force		Approx. 2.0N	
Electrode life *5		Approx. 5000 splices	
	Dimensions W	Approx.170mm without projection	
Physical	Dimensions D	Approx.173mm without projection	
description	Dimensions H	Approx.150mm without projection	
	Weight	Approx. 2.8kg including battery	
	Temperature	Operate : -10 to 50 degreeC	
Environmental	remperature	Storage : -40 to 80 degreeC	
condition	Humidity	Operate: 0 to 95%RH non-condensing	
	· ·	Storage: 0 to 95%RH non-condensing	
	Altitude	Max. 5000m	
AC adaptor	Input	AC100 to 240V, 50/60Hz, Max. 1.5A	
	Туре	Rechargeable Lithium Ion	
	Output Capacity *6	Approx. DC14.4V, 6380mAh	
Battery pack	Сарасну в	Approx. 300 splice and heat cycles Recharge: 0 to 40 degreeC	
	Temperature	Storage: -20 to 30 degreeC	
	Battery life *7	Approx. 500 recharge cycles	
	LCD monitor	TFT 4.9 inches with touch screen	
Display	Magnification	200 to 320x	
Illumination	V-grooves	LED lamp	
	PC	USB2.0 Mini B type	
	External	USB2.0 A type	
Interface	LED lamp	Approx. DC5V, 500mA	
Interface	Ribbon Stripper	Mini DIN 6pin	
		DC12V, Max. 1A	
	Wireless *8	Bluetooth 4.1 LE	
	Splice mode	100 splice modes	
Data storage	Heat mode	30 heat modes	
g -	Splice result	20000 splices	
Saray halo for tripod	Splice image	100 images 1/4-20UNC	
Screw hole for tripod			
	Automatic	Splice mode selected using fiber type analysis	
		Fusion power calibration	
		Wind protector : open and close	
Other	functions	Sheath clamp : open	
features		Heater lid : open and close	
		Heater clamp : open and close	
	Reference guide Video and PDF file stored in splicer		
	Sheath clamp	Easy sleeve positioning clamp	
	Electrode	Replaceable without tool	

90S+ Options

Item	Model	Remark
	FH-70-200	200µm coating diameter
	FH-70-250	250µm coating diameter
Fiber holder	FH-70-900	900µm coating diameter
	FH-FC-20	900µm in 2mm diameter cable
	FH-FC-30	900µm in 3mm diameter cable
DC Adapter	DCA-03	Connect AC adapter not through battery
DC power cord	DCC-20	Car cigar socket to BTR-15/DCA-03
DC power cord	DCC-21	Car battery to BTR-15/DCA-03
Transfer Clamp	CLAMP-DC-12	Transferring drop cable on work tray
J-Plate	JP-10	Attaching to splicer, not to work tray
J-Plate	JP-10-FC	JP-10 with fiber clamps
Protection sleeve	FP-03	60mm, Max. 900µm coating diameter
	FP-03(L=40)	40mm, Max. 900µm coating diameter
	FP-03M	FP-03 with non-magnetic material

*1 Cleave length range depending on fiber type 5 to 16mm: 125µm cladding dia. and 250µm coating dia.

10 to 16mm: 125µm cladding dia. and 400 or 900µm coating dia. 5 to 10mm: 80µm cladding dia. and 160µm coating dia.

- 5 to 16mm : 150µm cladding dia. and 250µm coating dia.
 *2 Measured with a cut-back method relevant to ITU-T and IEC standard after splicing Fujikura identical fibers. The average splice loss changes depending on the environmental condition and
- *3 Measured at room temperature. The definition of splice time is from the fiber image appearing on LCD monitor to the estimated loss displayed. The average splice time changes depending on the environmental conditions, fiber type, and fiber characteristics.
- *4 Measured at room temperature with the AC adapter. The heat time is defined from the start beep sound to the finish beep sound. The average heat time changes depending on the environmental conditions, sleeve type and battery pack condition.
- *5 The electrode life changes depending on the environmental conditions, fiber type and splice
- modes.
 *6 Test condition
 - (1) Splice and heat time: 1 minute cycle
 - (2) Using the splicer power save settings
 - (3) Using a not degraded battery
 - (4) At room temperature
 - The battery capacity changes when testing with different conditions from the above.
- *7 The battery capacity decreases to a half after approx. 500 discharge and recharge cycles, The battery life is shortened further when using outside of the storage temperature range, operating temperature range, if completely discharged by storing for a long time without recharging. *8 Bluetooth® mark and logos are the registered trademarks of Bluetooth SIG, Inc.

Specifications



CT50 Specifications

lf.	Item Specification		
		Single mode optical fiber	
Applicable	Fiber type	Multi mode optical fiber	
fiber	Fiber count	Up to 16 fiber ribbon	
11501	Cladding dia.	Approx. 125µm	
	Cladding dia.	AD-10-M24 : Max. 900µm coating	
Applicable	Fiber setting	diameter	
coating	plate	AD-50 : Max. 3mm coating diameter	
coating	Fiber holder	Coating shape. : Refer to splicer options	
	T IDCI TIOICCI	AD-10-M24 : 5 to 20mm *1	
		AD-50 *C.D. : coating diameter	
	Fiber setting	C.D. = 250µm or less : 5 to 20mm *1	
Cleave length	plate	250µm < C.D. < =900µm : 10 to 20mm	
		900µm < C.D. < =3mm : 14 to 20mm	
	Fiber holder	Approx. 10mm	
	Single fiber	Avg. 0.3 to 0.9 degrees	
Cleave angle *2	Fiber ribbon	Avg. 0.3 to 1.2 degrees	
Blade life *3		Approx. 60000 fiber cleaves	
	Dimensions W	Approx. 117mm without projection *4	
6	Dimensions D	Approx. 94mm without projection *4	
Physical	Dimensions H	Approx. 59mm without projection *4	
description	Weight	Approx. 306g	
		including battery and AD-10-M24	
	Temperature	Operate: -10 to 50 degreeC	
Environmental condition		Storage: -40 to 80 degreeC	
	Humidity	Operate: 0 to 95%RH non-condensing	
		Storage: 0 to 95%RH non-condensing	
Battery		2 pieces of LR03, AAA dry battery	
Wireless interface *5		Bluetooth 4.1 LE	
Screw hole for tripod		1/4-20UNC	
	Blade rotation	Motorized rotation	
Other	biade rotation	Manual rotation dial	
features	Replaceable	Blade	
	parts	Clamp arm	

CT50 Options

Item	Model	Remark
Fiber Setting Plate	AD-50	Optional fiber setting plate
Blade	CB-08	Blade for replacement
Clamp Arm	ARM-CT50-01	Clamp arm with anvil for replacement
Fiber Scrap Collector	FDB-05	Spare scrap collector
Side cover	SC-CT50-01	Side cover instead of scrap collector
	SPA-CT08-10	Cleave length 10mm
Spacer	SPA-CT08-09	Cleave length 9mm
	SPA-CT08-08	Cleave length 8mm

- *1 When the cleave length is less than 10mm, the coating diameter should be 250µm or less. Also, a blade height adjustment is required before cleaving. The average cleave angle is worse than the specification when the cleave length is less than 10mm.
- *2 Measured with an interferometer at room temperature, not with a splicer. A new blade was used to cleave both the single fibers and ribbon fibers. The average cleave angle changes depending on the environmental conditions, blade condition, operating method, and cleanliness.
- *3 The blade life changes depending on the environmental conditions, operating method, and the fiber type cleaved.

 *4 Measured in a condition when closing the lever.
- *5 Bluetooth® mark and logos are the registered trademarks of Bluetooth SIG, Inc.



Please visit our web site!

BEST QUALITY SERVICE SINCE 1978 -

https://www.fusionsplicer.fujikura.com

Fujikura Ltd.	1-5-1, Kiba, Koto-ku, Tokyo 135-8512, Japan General inquiries : +81-3-5606-1164 Service & support : +81-43-484-3962	https://www.fujikura.com
Fujikura Asia Ltd.	438A Alexandra Road, Block A Alexandra Technopark #08-03 Singapore 119967 General inquiries, Service & support : +65-6-278-8955	https://www.fujikura.com.sg
Fujikura Europe Ltd.	C51 Barwell Business Park, Leatherhead Road, Chessington, Surrey, KT9 2NY, UK General inquiries: +44-20-8240-2000 Service & support: +44-20-8240-2020	https://www.fujikura.co.uk
AFL	260, Parkway East, Duncan, SC29334, USA General inquiries: +1-800-235-3423 Service & support: +1-800-866-3602	https://www.aflglobal.com
TELECRON d.o.o.	Rim 21, 10000 ZAGREB, CROATIA Phone : +385-1-233 77 77 e-mail: Info@telecron.hr	http://www.telecron.net http://www.telecron.hr